

Cisco Skins

Installation Instructions


****** WARNING ******

Please thoroughly read the product warning below before installation to provide for a safe work environment.

1. Always consider the hazard to other people:
 - a. During installation, use warning signs, etc.
 - b. Don't work with people directly below the work area as equipment could fall and cause an injury
2. Be sure to securely fasten the access point to the wall or ceiling to before installing the skin.

Installation Instructions

Cisco Skins

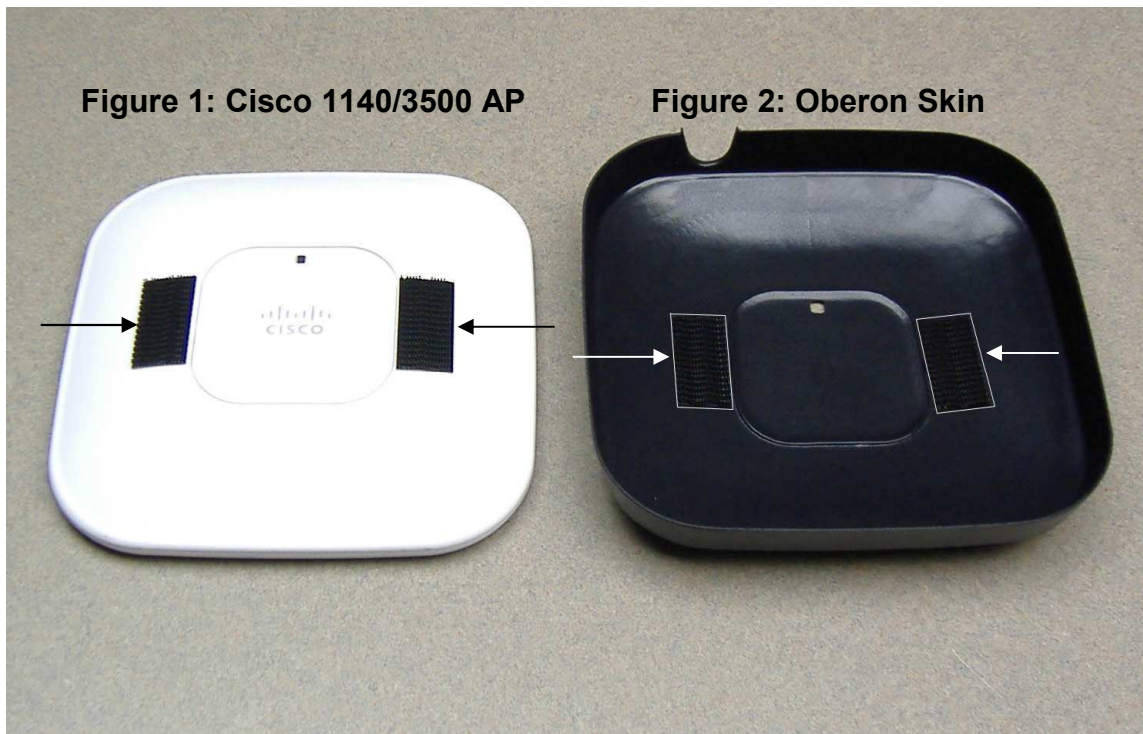

The following procedure should be used to install the Oberon skin on the Cisco 1140/3500 access point.

- 1) Be sure that the surfaces of the Cisco AP and the skin are clean. Prepare both surfaces by wiping with an alcohol swab to remove dirt and oil.
- 2) Remove the protective covering to expose the adhesive on the Velcro strips and place one piece on each side the plastic dome of the Cisco Access Point near the metal center section as shown in Figure 1.
- 3) Repeat the procedure for the dome, placing the Velcro strips just outside of the raised emboss inside the skin as shown in Figure 2.
- 4) Place the skin onto the Cisco AP and press firmly to lock the Velcro strips together. Note that the Velcro strips have significant holding power and removing the cover will be very difficult.